


RubbaPour Repair Kit Instructions

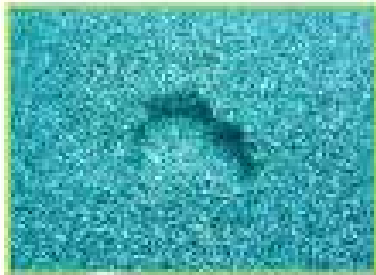

Remove all loose material from damaged area



Mark area to be cut back



Cut back area neatly with knife to give a clean edge



Remove damaged area



Ensure all materials are close to hand



Apply some primer to all edges to act as a bonding agent



Mix the granules and polyurethane binder together in the bucket



Pour mixed granules into the area



Overfill the hole to allow for compression



Screed and compress granules into the area



Ensure the granules are level and in line with existing surface



Leave the area to cure